

Sno-Kone

Instruction Manual



INSTRUCTIONS

ELECTRICAL REQUIREMENTS

The Sno-Kone operates on 120 Volt, single phase, 60 cycle AC current. Models are available in a 12 volt DC version. Be sure that your electrical supply meets this requirement.

ICE REQUIREMENTS

The Sno-Kone can take ice cubes or block ice, if you break the block into pieces approximately 3 to 4 inches in size.

TO OPERATE THE SNO-KONETTE

1. To use the machine, press and hold the switch located at the back of the machine.
2. Fill the gooseneck to within an inch of the top with ice cubes or block ice (no larger than 3" to 4"). The larger the pieces, the better the snow.
3. Push the pusher handle down against the ice in the gooseneck. Apply firm and even pressure to make the best snow. Practice will allow you to gauge when to stop pressing. This allows the ice to resettle against the cutterhead. You may find that you need to relieve the pressure two or three times in a cycle. Over pressing will stall the motor. In this case, simply relieve the pressure and try again. Too much pressure will result in snow that is coarse; too little pressure will make the snow mushy.
4. Be aware that under normal operating conditions the motor will become very warm. A surface temperature of 150° F is normal.